



# STONCO

## INSTALLATION INSTRUCTIONS FOR 900 and 3800 Series Bullets



Read instructions carefully before attempting to install fixture or service this unit. Failure to do so may result in bodily injury, property and/or fixture damage.

Retain instructions for future reference. (See Notes 6 & 10)

**1. WARNING:** Make sure power is turned off at circuit breaker before installing or servicing.

2. Pull wires coming from 1/2" arm ① thru 1/2" NPS access hole of mounting cover ② (not supplied.)

3. Screw onto 1/2" arm.

4. Make wire splices inside mounting box ③ (not supplied.) Be sure white supply wire is connected to white fixture wire and black supply wire is connected to black fixture wire. Attach ground wire per NEC. Use wire nuts to secure splices.

5. Attach cover ② with fixture to mounting box ③. Be sure to sandwich gasket ④ supplied with box and/or cover between box ③ and cover ②.

6. **MAKE SURE TO READ THESE SPECIAL NOTES BEFORE INSTALLING LAMPS:**

a. **R Lamp** – when installing this type of lamp into a fixture aimed above horizontal, a lens must be used ⑥.

b. **PAR Lamp** – when installing this type of lamp into a fixture aimed above horizontal without a lens, a gasket must be used. Make sure to install gasket ⑦ by lining up notches in gasket with bosses along the inside wall of housing. Press firmly at these three locations.

c. **MR16** – remove bracket from shield. Place lamp in the center of lens and re-install bracket over lamp. Base of lamp should now pass through the hole in bracket.

**NOTE: INNER GASKET ⑦ MUST BE DISCARDED WHEN A LENS ASSEMBLY ⑥ IS BEING USED.**

7. Install lamp.

8. Install shade ⑧ by gently turning in a circular motion as it slides into bullet housing. DO NOT PUSH STRAIGHT INTO HOUSING.

9. Adjust fixture aiming.

10. **WHEN TO USE DRAIN HOLD PLUGS ⑨:**


**AIMING ABOVE HORIZONTAL:**

a. If fixture is mounted with arm below the base of the housing (as shown in illustration), rubber drain-hole plugs ⑨ at rear and bottom of fixture must be removed.

b. If fixture is mounted with arm above the base of the housing, the rubber drain hold plug at the top of the fixture must be in place, and the plug at the rear of the fixture must be removed.

**AIMING BELOW HORIZONTAL:**

a. If fixture is mounted with arm either above or below the housing, the rubber drain hole plugs ⑨ at rear and bottom of fixture must be left in place.

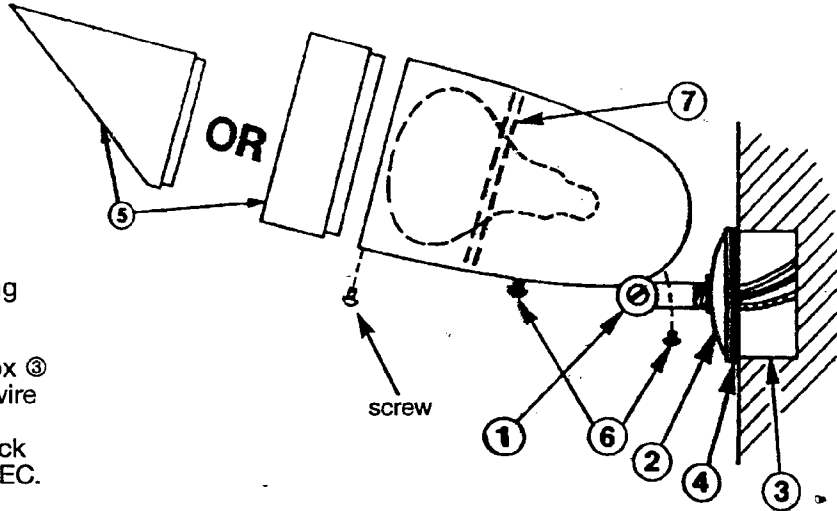

### LIMITED ONE YEAR WARRANTY

Fixtures are warranted against mechanical and electrical defects for a period of one year from date of delivery. Replacement or repair of authorized returns found to be mechanically or electrically defective within the warranty period constitutes fulfillment of all obligations under this warranty. We assume no responsibility for the improper installation of our products, or for labor costs involved in repair or replacement. Ballasts and lamps are covered by manufacturers' trade warranties. FULL STATEMENT OF LIMITED WARRANTY POLICY AVAILABLE UPON REQUEST.



# STONCO

PO Box 129, Union, New Jersey 07083

UN-59-01329-000 11/95