

HOW TO INSTALL LAMP

BEFORE INSTALLING LAMP:

- Check that fixture is NOT USED as splice compartment.
- Inspect the condition of the lamp porcelain. DO NOT USE if cracked or broken.
- Check to see that lamp voltage matches supply voltage.
- For best performance follow lamp manufacturer's instruction.

NOTE: Lamp must be within 4° horizontal for best operating performance.

INSTALLING LAMP:

To ease the lamping of this quartz fixture, one of the lamp sockets (the left socket when fixture is facing you) is retractable.

NOTE: Do not touch glass envelope of lamp. Use tissue or cloth.

1. Fit lamp into right-hand socket.
2. While holding lamp in the right-hand socket, pull back the left hand socket.
3. Fit the other end of lamp into the retracted left-hand socket, then gently release the spring. (DO NOT allow socket to bang against lamp.)
4. Gently move the lamp against socket contacts to assure proper seating.

